

# ednet Laminator, A4

91610

EAN 4054007916105



## Laminator, A4, 80-125 Mic Heating: Mica Plate, white

With the ednet A4 laminator, protect or enhance the appearance of your photos, documents, business cards, identity cards etc. with a size of up to DIN A4. Thanks to the short warm-up time of 3 minutes, the laminator is quickly ready to use. Status LEDs inform you of the status. Thanks to the ABS (anti-blocking system) button, film jams can be prevented or quickly re-elevated. This function guides the document back to the feeder. Films with a thickness of 80-125 microns with a width of up to 230 mm can be used. The laminating speed is 400 mm / min.

### Protect or enhance the appearance of your photos, documents, business cards, identity cards etc. with a size of up to DIN A4

- Protect or enhance the appearance of your photos, documents, business cards, identity cards etc. with a size of up to DIN A4
- Suitable for laminating sizes: DIN A4, DIN A5, DIN A6, business cards
- Film thickness: 80-125 microns

- Laminating width: up to 230 mm
- Warm-up time: 3 min.
- Laminating speed: 400 mm / min.
- ABS (anti-blocking system) / jam release button
- Compact, modern design
- LED status indicator
- Heating element: Mica plate (mica ceramic plate)
- Power consumption: 260W
- Input voltage: 220-240, 50 Hz
- Dimensions: L 35.5 x B 13.5 x H 5.8 cm
- Weight: 0.7 kg
- Color: White
- GS certified

### Package contents

- Laminator, A4
- User manual

Logistics						
	Number (pcs)	Weight (kg)	Depth (cm)	Width (cm)	Height (cm)	cm <sup>3</sup>
Packaging Unit Carton	6	5.10	38.00	31.50	20.70	24,777.90
Packaging Unit Inside	1	0.85	36.50	15.00	6.40	3,504.00
Packaging Unit Single	1	0.85	36.50	15.00	6.40	3,504.00
Net single without Packaging	1	0.53	36.50	15.00	6.40	3,504.00

**More images:**



**Safety notes**

- Read the operating instructions carefully and completely before using the appliance for the first time.
- Always place the appliance on a level and dry surface. It must be freely accessible from all sides. It is not advisable to use an extension cable!
- Do not open the laminator or repair it yourself. Take it to your specialist dealer if it has been damaged or contact our service hotline.
- Only use film pockets of the correct size (max. up to A4) and thickness (80 to 100 micrometers). Foil pockets that are too thin can lead to a blockage inside the device.
- Do not touch any hot surfaces of the appliance after it has been put into operation.
- For safety reasons, the laminator must not be used by children unless they are supervised by an adult.
- Do not operate the appliance outdoors or near water.
- Do not use the device to hot laminate materials that are sensitive to heat, such as thermal fax paper. These materials are only suitable for cold lamination.
- Do not spill or pour any liquid on the appliance and do not allow it to enter the appliance.
- Do not insert any metal objects into the appliance. Do not reach into the appliance with your fingers.
- The laminator is not suitable for continuous commercial use. It is advisable to set the appliance switch to the "O" position for 30 minutes after it has been in operation for approx. 30 minutes.
- The socket outlet must be located near the appliance and must always be easily accessible.

**EU responsible person**

EU based economic operator ensuring the product complies with the required regulations.

ASSMANN Electronic GmbH  
Auf dem Schüffel 3  
Lüdenscheid, Germany  
<https://www.assmann.com>  
[info@assmann.com](mailto:info@assmann.com)